


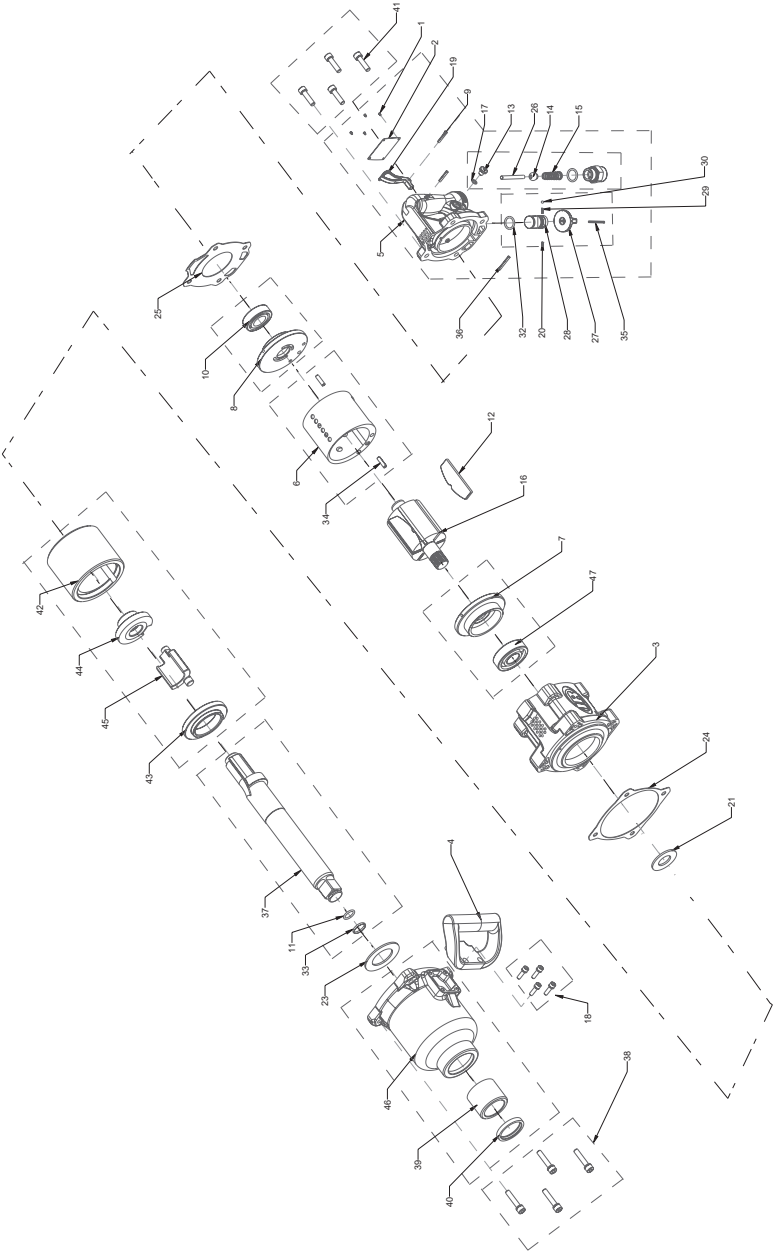

E699-8 Series: E699-8, E2998, 6998G 1 Inch Air Impact Wrench- Parts List

Item	Part Description		Part Number	Item	Part Description		Part Number
3	Housing	壳体	---	30	BALL	钢珠	---
	For E699-8	银灰色	TP-6998G-040	29	SPRING	弹簧	---
	For 6998G	灰色	TP-E699-8-040	25	GASKET, HANDLE	手柄垫圈	TP-E699-8-283
	For E2998	红色	TP-E2998-040	*	CYLINDER ASSEMBLY	气缸组件	TK-E699-8-003
*	HANDLE ASSEMBLY	手柄组件	---	6	CYLINDER	气缸	---
	For E699-8	银灰色	TK-E699-8-092	34	CYLINDER PIN	气缸销 (2只)	---
	For 6998G	灰色	TK-6998G-092	*	REAR END PLATE ASSEMBLY	后端板组件	TK-E699-8-012
	For E2998	红色	TK-E2998-092	8	REAR END PLATE	后端板	---
36	STOP PIN 4x32	止位销 4x32	---	10	BEARING	轴承	---
19	TRIGGER	扳机	---	16	ROTOR	转子	TP-E699-8-053
	For E699-8, 6888G	红色	---	12	VANE PACK(SET OF 6)	叶片 (6片)	TK-E699-8-042
	For E2998	黑色	---	*	FRONT END PLATE ASSEMBLY	前端板组件	TK-E699-8-011
*	INLET ASSEMBLY	进气口组件	TK-E699-8-212	7	FRONT END PLATE	前端板	---
31	O-RING 18x2	O型圈 18x2	---	47	BEARING	轴承	---
26	PLUNGER	活塞	---	*	HAMMER MECHANISM KIT	打击机构组件	TK-E699-8-THK
22	INLET ADAPTER	进气口	---	42	HAMMER FRAME	打击罩	TP-E699-8-703
17	O-RING 7x1	O型圈 7x1	---	44	HAMMER CAM	打击凸轮	TP-E699-8-721
15	SPRING	弹簧	---	45	HAMMER	打击块	TP-E699-8-724
14	THROTTLE VALVE	阀座	---	43	HAMMER PLATE	打击端板	TP-E699-8-706
13	SCREW	螺钉	---	*	HAMMER CASE ASSEMBLY	打击壳体组件	TK-E699-8-727
1	RIVET	铆钉	---	46	HAMMER CASE	打击壳体	---
9	TRIGGER PIN 4x24	扳机销 4x24	---	40	OIL SEAL	油封	---
2	NAMEPLATE	铭牌	---	39	BUSHING	衬套	---
	For E699-8	---	TL-E699-8-301	*	ANVIL ASSEMBLY	打击轴组件	TK-E699-8-626
	For 6998G	---	TL-6998G-301	37	ANVIL	打击轴	---
	For E2998	---	TL-E2998-301	33	SOCKET RETAINER	卡环	---
5	HANDLE	手柄	---	11	O-RING	O型圈	---
	For E699-8	银灰色	TP-E699-8-092	18	DEAD HANDLE SCREW (SET OF 4)	辅助手柄螺钉 (4只)	TK-E699-8-078
	For 6998G	灰色	TP-E6998G-092	38	HAMMER CASE SCREW (SET OF 4)	打击壳体螺钉 (4只)	TK-E699-8-638
	For E2998	红色	TP-E2998-092	41	HANDLE SCREW (SET OF 4)	手柄螺钉 (4只)	TK-E699-8-667
*	REVERSE VALVE ASSEMBLY	换向阀组件	---	4	DEAD HANDLE	辅助手柄	---
	For E699-8, 6888G	红色	TK-E699-8-A329		For E699-8	银灰色	TP-E699-8-48
	For E2998	黑色	TK-E2998-A329		For 6998G	灰色	TP-6998G-48
35	PIN 3x35	销子 3x35	---	---	For E2998	红色	TP-E2998-48
28	REVERSE VALVE SEAT	换向阀座	---	21	HAMMER CAM WASHER	打击罩垫圈	TP-E699-8-207
27	REVERSE VALVE	换向阀	---	24	GASKET	垫圈	---
	For E699-8, 6888G	红色	---		For E699-8, 6888G	红色	TP-E699-8-247
	For E2998	黑色	---		For E2998	黑色	TP-E26998-248
20	PIN 3x7	销 3x7	---	23	WASHER	垫片	TP-E699-8-246
32	O-RING 17x2	O型圈 17x2	---				

* Indicates not illustrated.

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoll Rand office or distributor.

Related Documentation

Manuals can be downloaded from ingersollrand.com

For additional information, refer to:

Product Safety Information Manual 04580916.

Product Information Manual TL-E6998-PIM.



ingersollrand.com
© 2024 IngersollRand

TL-E6998-PLM
Edition 3
October 2024